



Biketronics BT1005 Wire Map

BT1005 Fitment:
1998 to Present
Harley-Davidson FLT

WARNING!

Adjusting/Reseting Module

The BT1005 Module must be disconnected from the Harley-Davidson 23-pin connector while adjusting or resetting the blue dial!

INSTRUCTIONS

1. Adjust blue dial on top of Biketronics module to match correct setting for Bike year and Radio brand, according to the chart to the right.
2. Connect Biketronics harness wires to radio harness wires, matching colors, for permanent connection. Soldering is recommended.

KENWOOD & JVC RADIOS


Connect Blue/yellow wire on BT1005 module to Blue/yellow wire from Kenwood or JVC.

SONY, ALPINE & PIONEER RADIOS

Connect black cable/right angle plug to jack located on rear of radio. Jack is typically denoted as a steering wheel control input.

BT1005 BLUE DIAL SETTING

DIAL SETTING	BIKE YEAR	RADIO
0	06-12	SONY
1	06-12	JVC
2	06-12	KENWOOD
3	06-12	ALPINE
4	06-12	PIONEER
5	06-12	RESERVED
6	06-12	RESERVED
7	06-12	RESERVED
8	98-05	SONY
9	98-05	JVC
A	98-05	KENWOOD
B	98-05	ALPINE
C	98-05	PIONEER
D	98-05	RESERVED
E	98-05	RESERVED
F	98-05	RESERVED

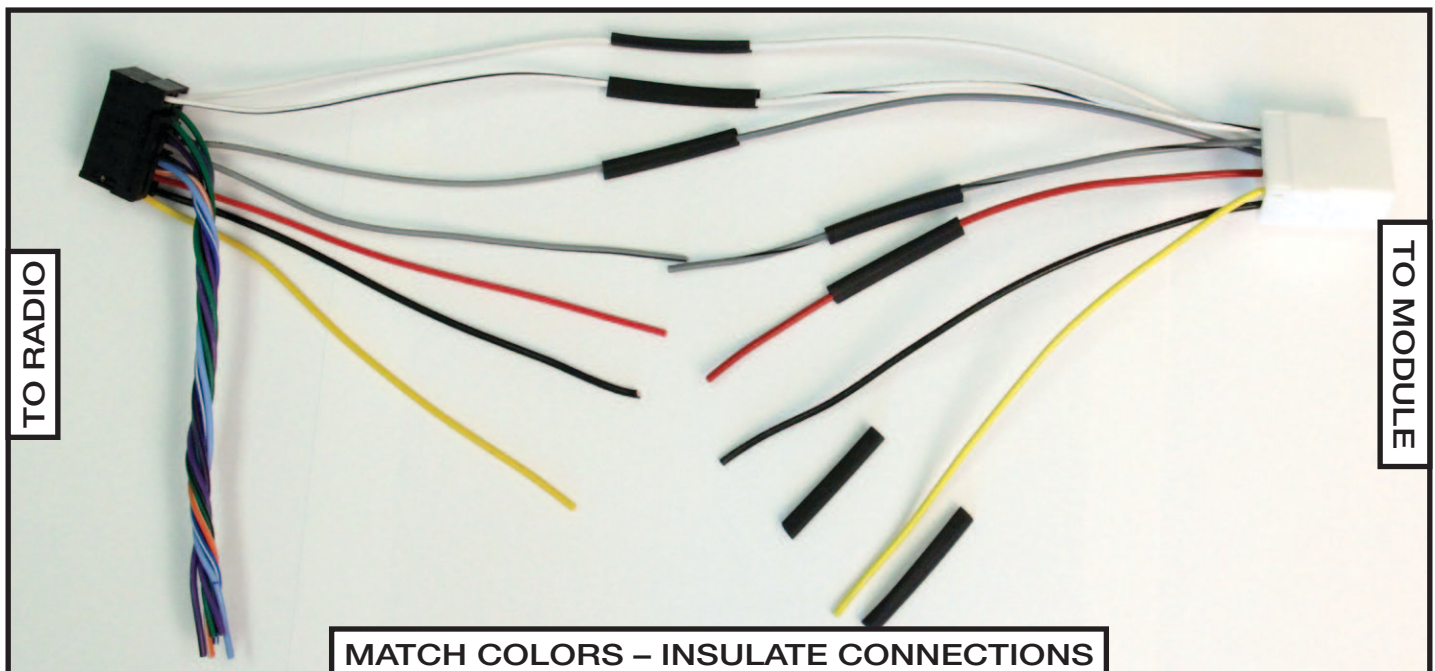

SONY & PIONEER	Right Switch	Single Short Press	Double Press	Single Long Press (>1 sec)
	Up	Seek up	N/A	N/A
	Middle	Source	FM/AM	Presets
	Down	Seek down	N/A	N/A
	Left Switch	Single Short Press	Double Press	Single Long Press (>8sec)
	Up	Volume up	N/A	N/A
	Middle	Audio Adjustment	N/A	AVC Setting
	Down	Volume down	N/A	N/A

JVC Not valid with GPS	Right Switch	Single Short Press	Double Press	Single Long Press (>1 sec)
	Up	Seek up	N/A	N/A
	Middle	Source	FM/AM	Presets
	Down	Seek down	N/A	N/A
	Left Switch	Single Short Press	Double Press	Single Long Press (>8 sec)
	Up	Volume up	N/A	N/A
	Middle	N/A	N/A	AVC Setting
	Down	Volume down	N/A	N/A

KENWOOD	Right Switch	Single Short Press	Double Press	Single Long Press (>1 sec)
	Up	Seek up	N/A	N/A
	Middle	Source	FM	AM
	Down	Seek down	N/A	N/A
	Left Switch	Single Short Press	Double Press	Single Long Press (>8sec)
	Up	Volume up	N/A	N/A
	Middle	N/A	N/A	AVC Setting
	Down	Volume down	N/A	N/A

ALPINE	Right Switch	Single Short Press	Double Press	Single Long Press (>1 sec)
	Up	Seek up	N/A	N/A
	Middle	Source	FM/AM	Presets
	Down	Seek down	N/A	N/A
	Left Switch	Single Short Press	Double Press	Single Long Press (>8sec)
	Up	Volume up	N/A	N/A
	Middle	N/A	N/A	AVC Setting
	Down	Volume down	N/A	N/A