


Wiring diagram for "Wire-in" installation of Biketronics TailBones/TailRunner/TailStopper module.

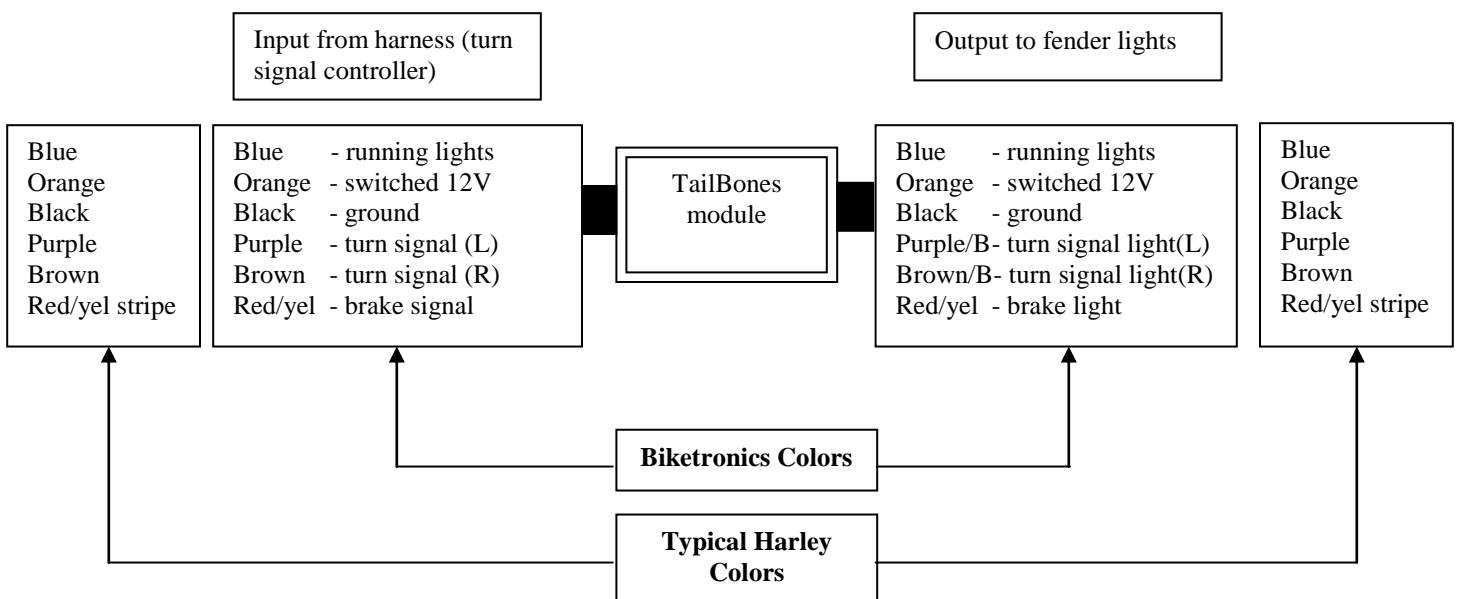

Note(s):

1. Instructions apply to any Biketronics Tail module, including TailBones, TailStopper, and TailRunner.
2. Although the TailBones has a ground wire for each output (left and right), it is not necessary to route these to the turn signal lights if a frame ground is being used and it is also not necessary to connect all the black wires to ground or to a light.
3. Typical Harley colors shown are supplied as a general rule. Always consult your service manual.
4. Use caution to avoid shorting out TailBones module Blue and/or Orange wires to ground as this may **DAMAGE** unit. Please double-check your wiring.
5. Any load equalizer (including the SmartEqualizer) should be placed before the taillight module – closest to the bike's turn signal cancellation module.
6. Questions? Feel free to give us a call. We are here to help.